

## 3/8" Aluminum Hinge Roll Up Mat Specs - R

---

### MATERIAL MAKE-UP

- 3/8" Rollup Perfec Mat - 6063-T52 aluminum.
- Lifts and rolls up for easy maintenance.
- Floor Mat Thickness: 3/8"
- Blade Spacing: 1" x 3/16" slotted holes for maximum drainage
- Tread rails shall be spaced on 2" center and connected with a long lasting, size retentative aluminum hinges.
- [Insert Options](#) Include:
  - Carpet
  - Poly Brush
  - Vinyl
  - Vinyl Abrasive
  - Serrated Aluminum
- Standard load rating is 300 lbs./wheel rolling load.
- Available with Recessed and Surface frame options.
- Frame depth varies from 7/16" (standard applications) to 3" (deeper pit applications) for recessed needs.
- Please consult a sales representative for specific product line drawing profiles.

### FORMAT

Recessed or Surface Roll Up Mat

## Aluminum Hinge Roll Up Mat 3/8" -R

### Connecting Sections:

1. Lay both sections next to each other with the tread side down onto a clean surface to prevent scratching or staining.
2. Find the end of the mat that has the set screws holding the rails together. If the set screws are on opposite ends of the sections, turn sections around so they all line up.
3. Unscrew the set screw on one of the rails that will connect two sections with a 5/64 hex key.
4. Pull the loose rail off the one section.
5. Line up the two sections leaving just enough room for the one rail. Then slide the loose rail into the female side of one section and over the male side of the other section.
6. Attach rail to each section by screwing set screws on each side in the predrilled holes (This will ensure that the mat will be square). **CAUTION: BE CAREFUL NOT TO OVER TIGHTEN SET SCREWS. DOING SO MAY CAUSE A RAISED MARK ON THE TREAD SIDE OF THE MAT.**

### Trimming Vinyl Filler:

1. Lay mat flat with tread side up and use a straight edge to trim filler to be even with aluminum mat rails. Repeat on all corners of the mat.
2. Next lay mat in recessed flooring with the tread side up and push on both ends of the traffic direction to compact mat as much as possible.
3. Center the mat inside the recessed portion to ensure equal amounts of filler on either side.
4. Take box cutter to vinyl to trim filler to size. **NOTE: The alternating grooves of the filler are 1/8" wide with a 1/8" tab between. Cut slowly along one of the tabs to get a straight cut.**
5. Make sure mat fits (compacted) in the recessed portion of the floor.

### Replacing Vinyl Filler:

1. Lay mat with the tread side down onto a clean surface to prevent scratching or staining.
2. Find the two set screws (one on each end) that are drilled through the aluminum rails and unscrew using a 5/64 hex key.
3. Pull vinyl filler out of the aluminum rail and replace with new filler.
4. Replace set screws on each end in the predrilled holes. **CAUTION: BE CAREFUL NOT TO OVER TIGHTEN SET SCREWS. DOING SO MAY CAUSE A RAISED MARK ON THE TREAD SIDE OF THE MAT.**
5. Trim filler so it is flush with aluminum rails on each end.
6. Lay inside recessed floor then push on both ends of the traffic direction to compact mat as much as possible. Next use box cutter to trim filler to size. **NOTE: The alternating grooves of the filler are 1/8" wide with a 1/8" tab between. Cut slowly along one of the tabs to get a straight cut.**
7. Make sure mat fits (compacted) in the recessed portion of the floor.

### Replacing or Adding Aluminum Hinge Rail(s):

1. Lay mat on a flat surface with tread side down onto a clean surface to prevent scratching or staining, then locate set screws on one side of the width of the mat.
2. Locate aluminum rail or rails that need replaced and unscrew set screws on both sides of the area needing to be replaced with a 5/64 hex key. If adding rails unscrew set screws on both sides of any rail in the middle of the mat.
3. Once loose, pull rail(s) out of the connecting rails.
4. Replace with new rails by sliding replacements into the female portion of existing mat and over the male portion of the other section. When adding, slide sections apart to allow for additional needed space.
5. Once in place, set screws can be replaced into predrilled holes. **CAUTION: BE CAREFUL NOT TO OVER TIGHTEN SET SCREWS. DOING SO MAY CAUSE A RAISED MARK ON THE TREAD SIDE OF THE MAT.**
6. Flip mat so that tread is up and replace mat into recessed floor.


## Installation Guide #551 Mat Frames



This frame is for surface or recess mounting.

### 1. Prepare the floor

Prepare the area on the flooring where the mat will be located.

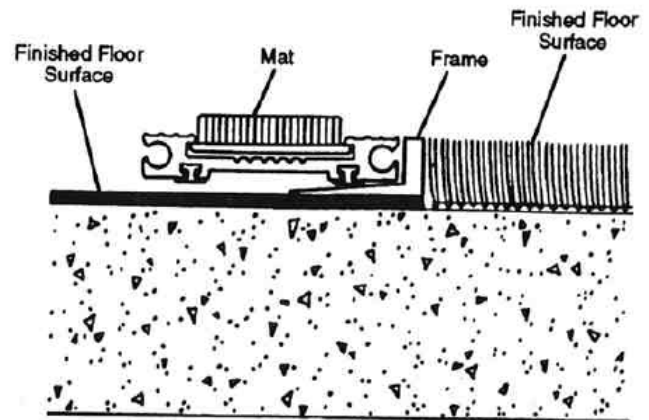

### 2. Drill anchor holes

The mat frames should be secured to the concrete floor using anchor bolts into lead anchors that are set into the floor.

Drill holes in the frames at about 2-ft (6-m) intervals for the bolts. Countersink the holes.

Set the frames into the recess at the appropriate locations to position the mat(s). Mark the hole locations on the concrete.


Remove the frames and drill holes in the floor for the anchors.

Install the anchors using an anchor setting tool.

### 3. Secure frames in the recess

Reinstall the frames. Secure them to the floor with  $\frac{1}{8}$ " x  $1\frac{1}{2}$ " anchor bolts into the lead anchors.

**NOTE:** If necessary, shim under the frame sections so that the top edge of the frames is flush with the higher finished floor surface, and the frames are level.

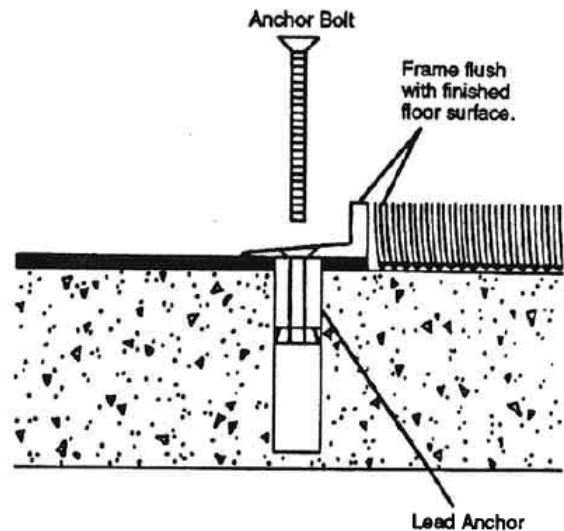


#### 4. Recheck all dimensions

Recheck that:


- The frame sides are straight
- The frame corners are at correct angles so the mat will fit properly
- All inside dimensions of the frame are accurate according to drawing measurements

**IMPORTANT:** The mat is made to fit snugly into the frame according to the drawing. Reese cannot be responsible for problems that result from improperly installed frames.

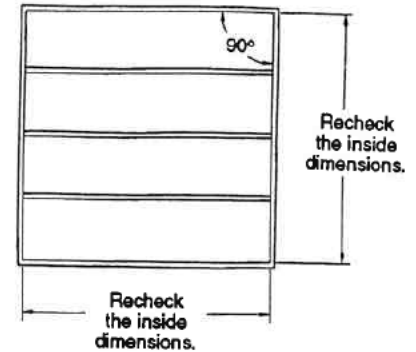


#### 5. Protect the frame edges

When the frame is anchored, install plywood or other material inside and (if necessary) outside of the frame to protect its edges from damage until the mat is installed.

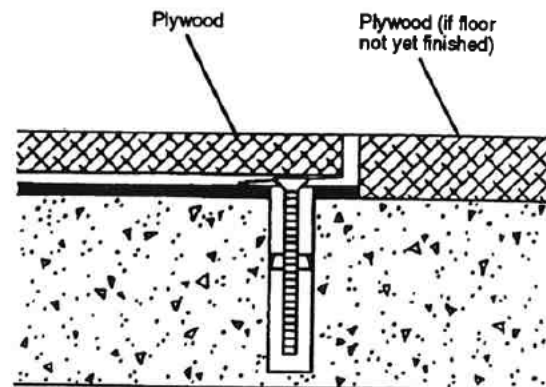


## Installation Guide #548 Mat Frames



### 1. Prepare the floor recess

Prepare a recess in the concrete flooring where the mat will be located. The recess should be at least:

- 1/2" (13 mm) deep
- 4" (100 mm) wider than the outside dimensions of the frame — this allows 2" (50 mm) on all sides to maneuver the frame into position

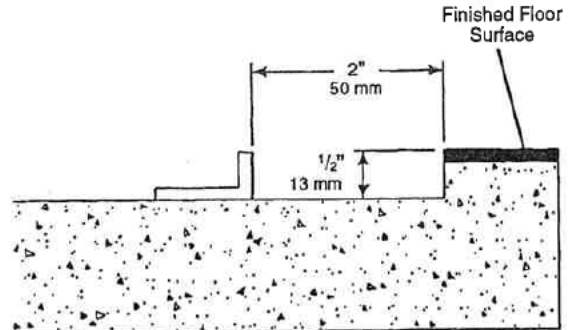


### 2. Drill anchor holes

The mat frames should be secured to the concrete floor using anchor bolts into lead anchors that are set into the floor.

Drill holes in the frames at about 2-ft (6-m) intervals for the bolts. Countersink the holes.

Set the frames into the recess at the appropriate locations to position the mat(s). Mark the hole locations on the concrete. Remove the frames and drill holes in the floor for the anchors.

Install the anchors using an anchor setting tool.

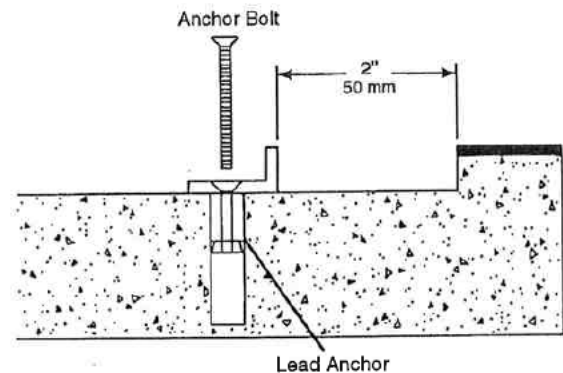


### 3. Secure frames in the recess

Reinstall the frames. Secure them to the floor with 1/8" x 1 1/2" anchor bolts into the lead anchors.

**NOTE:** If necessary, shim under the frame sections so that the top edge of the frames is flush with the finished floor surface, and the frames are level.

### 4. Pour concrete


Pour concrete (or grout) around the edges and in the center of the frame.

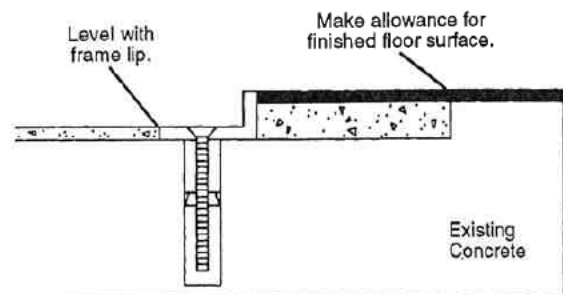




## 5. Level the concrete

Cut a board just slightly **shorter** than the width of the frame.  
Use the board to smooth and level the concrete.

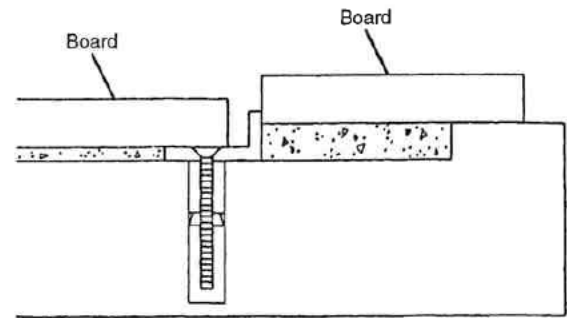

Be very careful that the concrete is absolutely smooth and level with the inside lip of the frame. This will allow the mat to lie perfectly flat and avoid rocking.

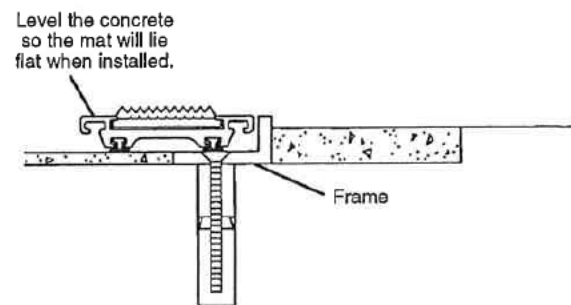

## 7. Recheck all dimensions


Before the concrete sets, recheck that:

- The frame sides are straight
- The frame corners are at correct angles so the mat will fit properly
- All inside dimensions of the frame are accurate according to drawing measurements

If the frame bows inward, use spreaders inside the frame until the concrete is thoroughly set.


**IMPORTANT:** The mat is made to fit snugly into the frame according to the drawing. Reese cannot be responsible for problems that result from improperly installed frames.

Use spreaders if frame bows inward.

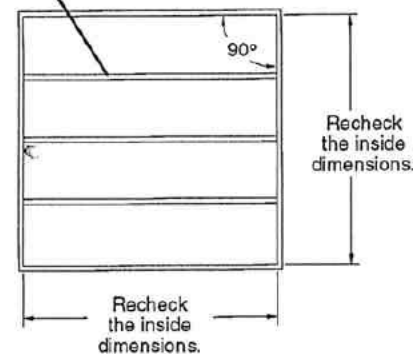


## 8. Protect the frame edges

When the concrete has hardened, install plywood or other material in the recess to protect the frame edges from damage until the mat is installed.

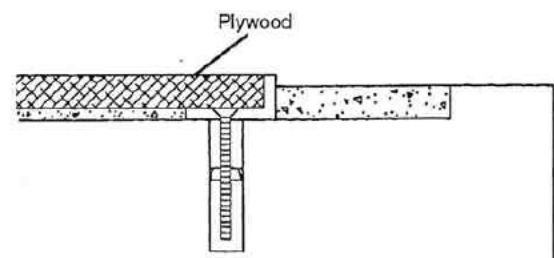


## Installation Guide #540 Mat Frames

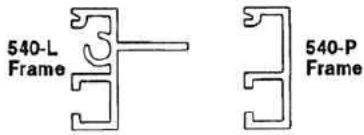

### 1. Prepare the floor recess

Prepare a recess in the concrete flooring where the mat will be located. The recess should be at least:


- 2½" (65 mm) deep
- 6" (150 mm) wider than the outside dimensions of the frame — this allows 3" (75 mm) on all sides to maneuver the frame into position

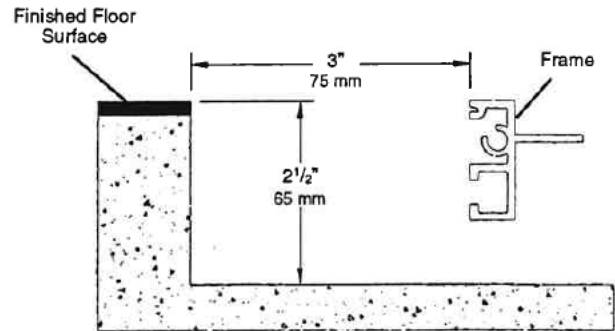

### 2. Install anchor bolts


Slide ¼" x 3" anchor bolts (with nuts) into the frames from the end. If you were unable to allow the 3" (75 mm) spacing specified above, you may have to bend the bolts so the assembled frame will fit in the recess.

Space the bolts at approximately 2-ft (0.5-m) intervals along the frame sections.

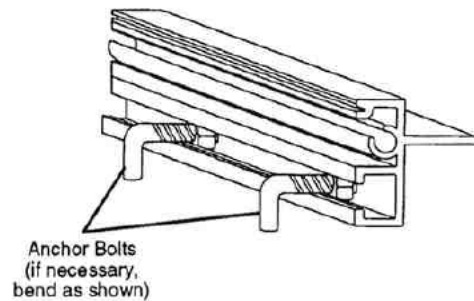

### 3. Assemble the frame

Using the screws provided, assemble the frame.

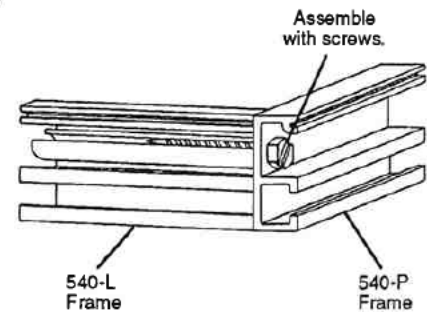


### 4. Place the frame in the recess

Set the frame in the recess at the desired location.

Use wooden shims to:


- Raise the frame so the top will be flush with the finished floor surface
- Level the frame

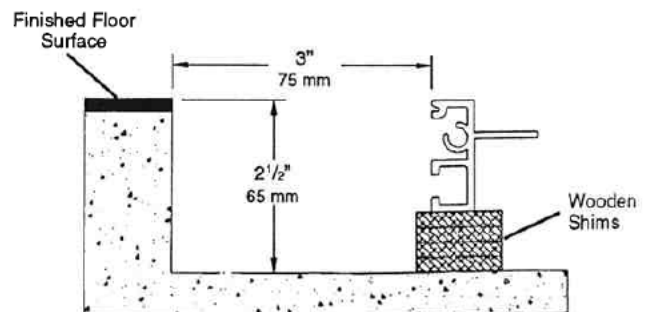




## 5. Pour concrete

Pour concrete (or grout) around the edges and in the center of the frame, until the concrete is level with the lip on the 540-L frame sections.

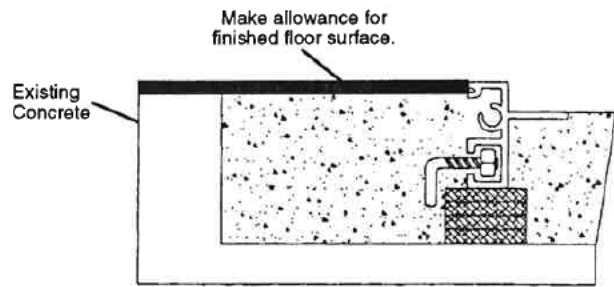


## 6. Level the concrete

Cut a board just slightly **shorter** than the width of the frame. Use the board to smooth and level the concrete.

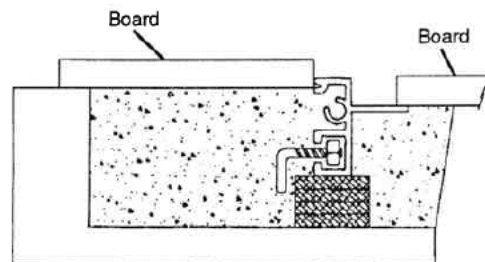

Be very careful that the concrete is absolutely smooth and level with the inside lip of the frame. This will allow the mat to lie perfectly flat and avoid rocking.

Level the concrete so the mat will lie flat when installed.

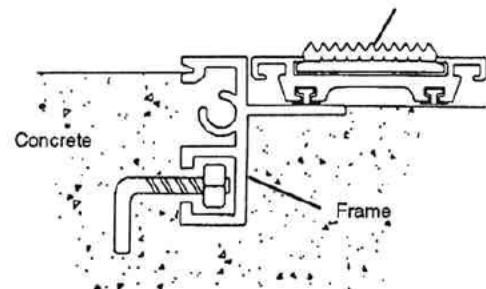

## 7. Recheck all dimensions


Before the concrete sets, recheck that:

- The frame sides are straight
- The frame corners are at correct angles so the mat will fit properly
- All inside dimensions of the frame are accurate according to drawing measurements

If the frame bows inward, use spreaders inside the frame until the concrete is thoroughly set.


**IMPORTANT:** The mat is made to fit snugly into the frame according to the drawing. Reese cannot be responsible for problems that result from improperly installed frames.

Use spreaders if frame bows inward.

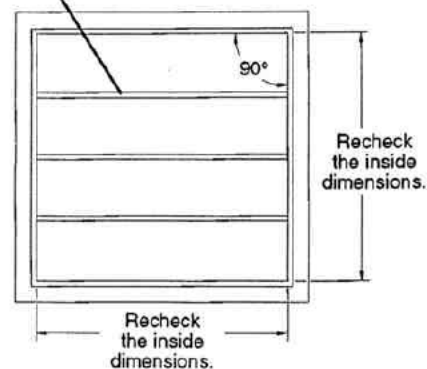

## 8. Protect the frame edges

When the concrete has hardened, install plywood or other material in the recess to protect the frame edges from damage until the mat is installed.

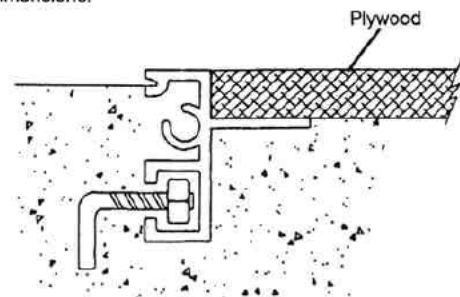

## Installation Guide #554 Mat Frames

1. **Drill anchor holes:** The mat frames should be secured to the concrete floor using anchor bolts into lead anchors that are set into the floor
  - Drill holes in the frames at approximately 2 foot intervals for the bolts. Countersink the holes
  - Set the frames at the appropriate locations on the floor. All pieces must be held tightly together so that mitered ends are flush with each other. Mark the hole locations on the concrete.
  - Remove the frames and drill holes in the floor for the anchors
  - Install the anchors using an anchor setting tool
2. **Secure frames:** Reinstall the frames. Secure them to the floor with 1/8" x 1 1/2" anchor bolts into the lead anchors
3. **Install mat inside frames:** Unroll the mat, and determine how much filler should be trimmed so that mat fits snugly between aluminum frame. ***The mat is made to fit snugly into the frame according to the drawing. Reese cannot be responsible for problems that result from improperly installed frames.***
  - Trim filler an equal distance from both ends so that mat fits snugly inside frame

## Claims and Warranty Information

### Claims:

- Goods in transit are at the risk of the purchaser for loss or damage.
- Claims for shortage or improper fulfillment of orders must be made within two weeks from the date of receipt.
- If goods appear defective, the purchaser should discontinue their use and notify Mad Matter at once so the matter can be investigated.
- Mad Matter does not assume liability for consequential damages or delays and claims for labor will not be allowed.
- Mad Matter, at its option, shall repair or replace any part or component part which shall prove defective to the original purchaser.

### Warranty:

- All Mad Matter weatherstrip and threshold products are guaranteed for a period of FIVE YEARS from the date of delivery against defects in material and workmanship.
- Self-adhesive weatherstripping must be installed within six months of the delivery date in order for the warranty to be valid.
- Defective goods will be replaced or repaired at the discretion of Reese Enterprises. No claims for damage incurred or work done thereon will be allowed.
- Cost of replacement shall not exceed the original purchase price.
- Warranty claims must be submitted in writing within the warranty period.
- Reese does not assume liability for defects or damage arising from improper installation, lack of recommended maintenance, misuse, modifications, use in incompatible products, or ordinary wear and tear.

### Cancellation Charges:

- Orders for special products and non-standard sizes are subject to a cancellation charge based on labor and material used prior to cancellation.

### Return Goods:

- No merchandise will be accepted for return without prior written approval.
- Specially fabricated products, non-standard drilling, and non-standard sizes are not returnable.
- Returned material must be of a recent sale (less than a year from the invoice date), standard stock sizes, and in resalable condition.
- All returns are subject to a 35% restocking charge plus freight charges.



## Maintenance Instructions for Carpet Treads

The carpet insert in your Perfec Clean entry mat or grate system will retain its beautiful new appearance for many years if a simple plan of regular maintenance is followed. It is important to establish this plan when the product is new, because the longer the soil remains in the carpet, the more difficult it is to remove. The type and schedule of maintenance is dependent upon the location, the amount of traffic and the type of soil. We recommend the following:

1. **Inspection for spots and stains** should be a daily routine. Remove all spots immediately to avoid permanent damage to carpet fibers. If the spill is a liquid, blot up as much as possible with a soft absorbent paper towel or clean white cloth. If the spill is semi-solid, scrape with a spoon or spatula and then blot with a damp sponge. Work from the edge of a spot to the center to keep the problem from spreading.

Two types of spot remover can be used. For oily stains such as tar, paint, grease, etc. a nonflammable dry cleaning solvent works best. However, caution should be taken to first test for color fastness. Put a few drops in an inconspicuous area, then press the area with a clean white cloth for 10 seconds. If there is evidence of loose dye, do not use. For other spills such as coffee, tea pet stains, etc. a dry soil extractor can be used. Follow manufacturer's directions for this product.

If these methods are unsuccessful, replacement strips are available.

2. **Vacuum Schedule:** A heavy duty vacuum cleaner with a rotating brush is the most effective way to routinely clean the carpet in your entry mat or grate system. By vibrating the fibers, this type of vacuum not only cleans the surface of the carpet, but removes soil that is embedded into the pile. It also aids in keeping the pile upright for longer lasting beauty. Clean heaviest traffic areas weekly or as necessary. Caution should be exercised when vacuuming near the carpet insert ends to avoid pulling the strips out of the tread rails.

1. **Carpet Cleaning Schedule:** Carpet should be deep cleaned when vacuuming will no longer remove the soil. This may be monthly, quarterly, or longer depending on soil and traffic conditions. Systems such as aerosols, foams, hot water extraction, or shampoo will work, but may leave a sticky detergent residue which will accelerate resoiling. Be extremely careful when selecting a method of this type. We recommend a dry cleaning system for several reasons:
  - a. Delayed resoiling
  - b. Convenience. Carpet remains dry allowing you to clean when and where you want.
  - c. Safe. No carpet damage from dye bleeding and reduces possible accidents caused by slipping on wet carpet.

## Maintenance Instructions for Serrated Aluminum Treads

Your Perfec Clean serrated tread mat or grating will retain its handsome appearance for years with a minimum amount of maintenance. The location and traffic load will determine the frequency of cleaning required. We recommend the following cleaning procedures:

The serrated aluminum tread should be cleaned as necessary with a soft bristle brush or a damp mop using mild detergent.



## **Maintenance Instructions for Polybrush Treads**

### **Weekly**

**Vacuum** with upright type vacuum equipped with good beater brush. May use a stiff hand brush to remove lodged debris not removed by vacuuming.

**Oil based soil and stains** may be removed using a solvent based carpet cleaner.

**Water based soil and stains** may be removed using a all-purpose neutral cleaner.

### **Monthly**

Shampoo with rotary shampooer, extractor, or other commercial cleaning machine. More frequent cleaning ( weekly or monthly ) is dependent on the amount of foot traffic utilizing your entry mat.

For more unusual situations, such as store remodeling, an immediate shampoo cleaning may be deemed necessary upon completion of entire project.

### **Note:**

The above brush tread maintenance instructions are suggestions to maintain and enhance the look of your entry mat. Conditions regarding weather, foot traffic, and general use will vary.

## **Maintenance Instructions for Vinyl Treads**

The vinyl Insert tread should be cleaned as necessary with a soft bristle brush or damp mop using a mild detergent and water, to remove soil. Avoid using strong solvents, especially petroleum based as they mar the vinyl surface.

The mat or grate sections should be removed from their recess and this area cleaned periodically to remove accumulations of dirt trapped by the Perfec Clean system. The location and traffic load will determine the frequency of cleaning required


---

**LEED DATA**  
**ENTRANCE SYSTEMS**

---

Recycled Material

- Aluminum material in our entrance systems contain a minimum average of 50% pre-consumer recycled material.
- Our santoprene and poly in the hinge of our rubber hinged mat contains an average of 80% pre-consumer recycled material.
- There is an average of 30% pre-consumer recycled material in all our vinyl fillers, borders, and vinyl inserts.
- Our abrasive brush and carpet inserts contain 50% pre-consumer recycled material for the backing of the insert.
- There is not any post consumer recycled material in our products.
- All Reese roll up mats and grates comply with EQ credit #5.

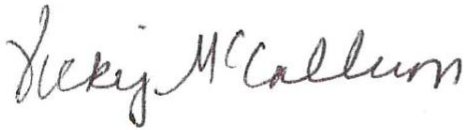

Vicky McCallum  
Office Manager  
Reese Enterprises, Inc.



Carpet Inserts



Charcoal



Black



Midnight



Sandy



Espresso



Java



Blue




Mauve



Black Cherry




**Poly-Brush Colors**

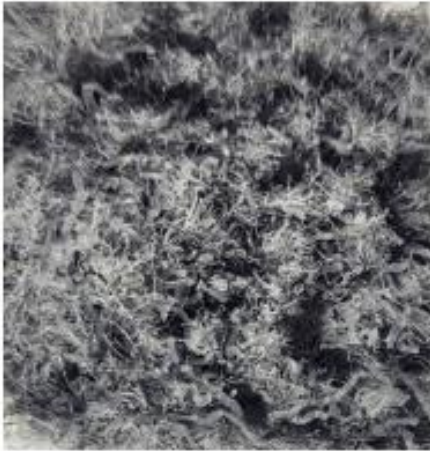

Grey



Black

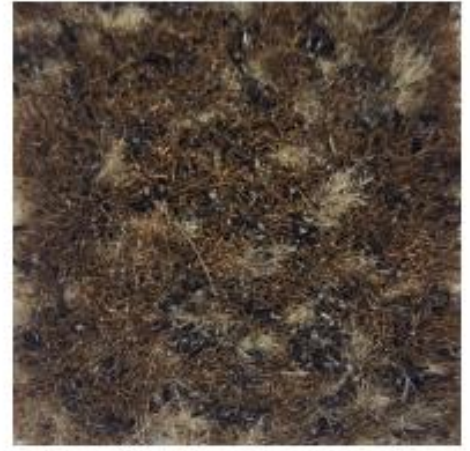

Brown

**Vinyl Inserts**



Black



Grey



Beige



Blue



Brown

**Serrated Aluminum Treads**

**\*\*only available if you alternate with a different tread**

